



The CartClip® Activator


The CartClip® Activator set has been designed to be the perfect pre-firing chamber priming tool for ink jet Cartridges. The following functions are possible:

- Removing trapped air bubbles from the pre-firing chamber.
- Filling the pre-firing chamber with solid air free ink without using expensive vacuum filling equipment.

User Instruction for:

40100056 CartClip® Activator Hewlett Packard 28/57/58

40100057 CartClip® Activator Hewlett Packard 100/343/344 > fig. A

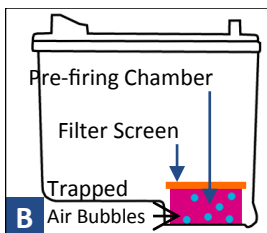

Content: Color cartridge kit 40100056 + 40100057: three Clips (C, M, Y) with pad and three syringes 1 ml
The sealing gaskets of the syringes are liable to abrasion. The syringes are consumable supplies which can be ordered separately from us.

The "Pre-Firing Chamber" > fig. B

The pre-firing chamber is the area between the filter screen and the nozzles, this area must be solid ink with no air bubbles present to enable the mechanics of the cartridge to function. The ink transfer from the foam to the nozzles heaters is made inside.


What happens if the "Pre-Firing Chamber" contains air bubbles?

The first and most obvious signs that there are air bubbles in the pre-firing chambers are the appearance of white lines in the print or extreme cases, complete ink starvation to a specific colour. This is due to the air bubbles blocking the path of the ink to nozzles.



Priming a re-filled cartridge.

- 1) Place the cartridge into the YELLOW Activator clip.
Note: All steps using the Activator Clip MUST be carried out with the syringe vertical at all times.
- 2) Operate the 1 ml syringe a few times to ensure that the plunger is operating smoothly.
- 3) Fill the syringe with ink to the 0.3 ml mark on the syringe barrel and insert it with the jet plate facing up into the connector of the clip.
- 4) While keeping the syringe perfectly vertical and the syringe plunger between your thumb and forefinger, *as slowly as possible* withdraw the plunger to the 0.8 ml mark on the syringe barrel *and hold*.
You should now start to see an air bubble slowly growing at the tip of syringe. > fig. C
If the air bubble stays still, the syringe plunger should be slowly withdrawn a further 0.1 ml, the aim is to pull the air bubble out so that it floats out through the ink to the syringe plunger. The air bubble can now be seen rising through the ink, with a second following close behind. > Abb. D
- 5) *As slowly as possible* deliver the ink from the syringe through the nozzles and *stop* at an ink level of 0.2 ml. Now wait a few seconds and withdraw the ink level to the 0.3 ml mark in order to allow the pressure between the syringe and the cartridge to equally balance out.
Note: Filling too fast will result in cross colour contamination. > fig. E
- 6) With the jet plate now facing downwards, carefully remove the syringe from the Activator Clip followed by the cartridge from the clip.
- 7) Gently press the cartridge onto several damp layers of tissue paper in order to ensure the cartridge is producing a good "foot print". > fig. F
- 8) Repeat these steps for the remaining colours, but ensure the jet plate is cleaned immediately after removing the cartridge from the clip. Failure to do this may result in cross colour contamination.
- 9) After the cartridge has been re-filled gently press the cartridge onto the several damp layers of tissue paper in order to let the cartridge leave a good "foot print".

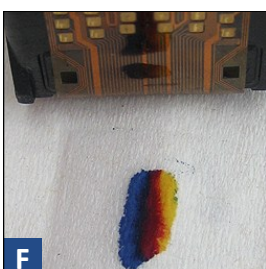

Produkte werden unmontiert geliefert: 1 Clip + 1 Dichtung. Preise auf Anfrage. Die abgebildeten Druckköpfe gehören nicht zum Lieferumfang. Anwendungen, Verwendungen und Verarbeitungen der bezogenen Waren sowie deren Prüfung auf ihre Eignung für die beabsichtigten Verfahren und Zwecke liegen ausschließlich in der Verantwortung des Käufers. Alle Marken in diesem Dokument sind eingetragene Warenzeichen ihrer jeweiligen Eigentümer und dienen nur zur Produktidentifizierung. CARTCLIP® ist ein eingetragenes Warenzeichen lizenziert für die BOWAJET GmbH. Fehler und Änderungen vorbehalten.

Products are delivered disassembled: 1 Clip + 1 Seal. Prices on demand. The shown cartridges are not part of delivery! Applications, uses and processing of the purchased goods, as well as their examination for its suitability to the intended procedures and purposes, exclusively lie in the buyer's responsibility. All brand names mentioned in this document are trademarks of their respective owners, only used for identification purposes. CartClip® is a registered trademark licensed to BOWAJET GmbH, Germany. Subjects to change.